SCHAUB LORENZ

BB-29193

BOOMBOX RADIO CD MP3

USER MANUAL

Please read and keep these instructions

Important safety instructions – please read carefully and keep for future reference

	To reduce the risk of fire or electric shock, do not expose this product to water, rain or moisture. To prevent the risk of electric shock, do not remove the cover or back of this product. In case of product failure, only qualified personnel can repair. There are no user-serviceable parts inside.
	Use of controls, adjustments, or performance of procedures other than those specified herein may result in dangerous radiation exposure. This product is rated as LASER CLASS 1 PRODUCT. CAUTION: Laser radiation when open - never stare into the laser beam.

CAUTION!

Dangerous tension inside the product! Do not open. Risk of electric shock ! No parts can be repaired by the end-user. Only qualified personnel can repair and maintain this product.

If the electric cord is damaged, it must be replaced by the manufacturer or qualified after-sales personnel in order to avoid any danger.

The product must be installed in accordance with local laws.

Damaged batteries must be properly disposed. In order to protect the environment, please dispose the batteries properly, in accordance with local laws (information is available at your reseller).

Where to install the product

- Place the product on a straight, rigid and stable place. Do not place the product on a carpet.
- Do not place the product on top of another that may cause overheating (for example, a receiver or amplifier).
- Do not place anything underneath the product (for example, CDs or magazines).

Proper ventilation

- Place the product in a sufficiently–aerated place to avoid overheating. Allow at least 10cm spacing at the back and top of the product, and 5cm spacing on both sides to prevent overheating.
- Do not place items such as newspapers, tablecloth, curtains, in front of the ventilating openings.

Do not expose the product to high temperatures, moisture, water and dust.

- The apparatus shall not be exposed to dripping or splashing. No object filled with liquids, such as vases, shall be placed on the apparatus.
- Do not place other items close to this product that may damage it (for example, objects containing water or lightened candles).
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

Electric supply

- Please unplug the product in case of prolonged non-use.

- This product is intended to be used under temperate climate and should not be used under tropical climate.
- If the supply cable is damaged, it must be replaced by the manufacturer or qualified after-sales personnel to avoid any danger.
- This product must be connected to an electrical supply 230V ~ 50Hz.
- The plug must be accessible after installation.

CE	This product is compliant with directives 2006/95/CE (abrogating the directive 73/23/CEE modified by the directive 93/68/CEE) and 2004/108/CE (abrogating the directive 89/336CEE).

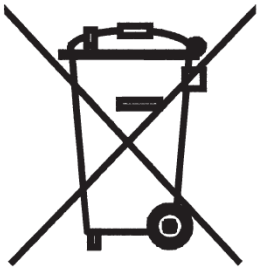

- This logo set on the product means that the recycling of this apparatus comes within the framework of the directive 2002/96/EC of January 27, 2003 concerning the waste on electrical and electronic equipment (WEEE).

- The presence of dangerous substances in the electrical and electronic equipments can have potential consequences on the environment and human health in the cycle of reprocessing this product.

- Therefore, at the end of its lifetime, this product shall not be disposed with other non-recycled waste.

- As the end user, your role is of prime importance in the cycles of re-using, recycling, and other forms of valorization of this electrical and electronic equipment. Local authorities and resellers have set special procedures for the purpose of collecting and recycling this product.

- You have the obligation to use the selective waste collection systems put in place by your local authorities.

PRODUCT PRESENTATION

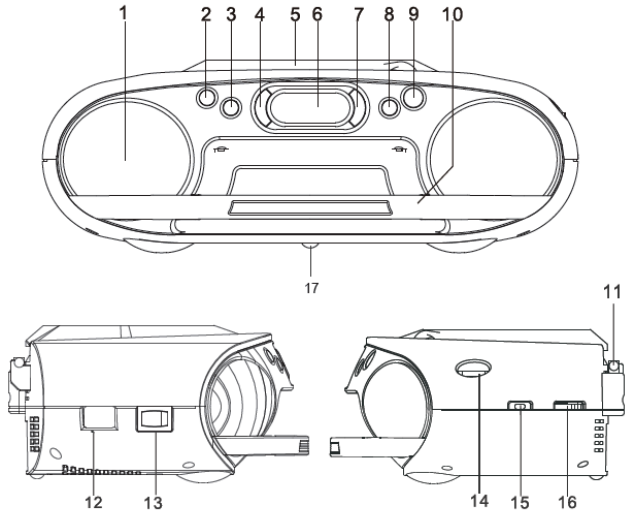

1. SPEAKER

2. PROGRAM BUTTON

3. PLAY MODE BUTTON

4. CD SKIP BACK ⏮ BUTTON

5. CD DOOR

6. LCD DISPLAY

7. CD SKIP AHEAD ⏭ BUTTON

8. STOP/FOLDER BUTTON

9. CC PLAY/PAUSE BUTTON

10. HANDLE

11. FM ANTENNA

12. AC INPUT SOCKET

13.POWER ON/OFF SWITCH

14. RADIO STATION TUNNING KNOB

15. FUNCTION SWITCH AM/FM/AUX/CD.MP3

16. VOLUME BUTTON

17. BATTERY COMPARTMENT

INITIAL INSTALLATION

BATTERY INSTALLATION

1. Open the battery compartment cover.

2. Insert 6 pcs. X LR14 type batteries into battery compartment. Be sure to insert batteries polarity correctly.

3. Close the battery compartment cover.

4. The unit is now ready for operation.

NOTE:

1. The battery can be disconnected automatically when the AC cord is inserted to the AC INPUT socket when operated by AC.

2. Remove all the batteries from battery compartment in case of prolonged nonuse.

3. After using the unit with batteries (not included), you should remove them in order to power off the unit.

OPERATIONS

PLAYING A DISC

This unit is capable of playing standard CDs or 8 cm single discs: on adapter is required.

1. Set FUNCTION selector to CD/MP3 position.

2. Open the CD compartment.

3. Insert a CD disc to the CD compartment.

4. Close the CD compartment. The total number of tracks will be displayed and the CD player will stop. If a disc is inserted incorrectly, dirty, damaged or not present at all, the CD display will show “- “and the CD player will stop.

5. Press PLAY/PAUSE button to begin playback.

6. Press STOP /FOLDER button to stop.

PAUSE

This disc can be paused at any time during play by pressing the PLAY/PAUSE button once. The track number indicator will flash. Press the PLAY/PAUSE button again to continue.

Repeat Modes:

CD MODE:

-REPEAT > REPEAT ALL > RANDOM > NORMAL

MP3 MODE:

-REPEAT > REPEAT ALBUM > REPEAT ALL > RANDOM > NORMAL

FORWARD/REVERSE SKIP

1. Press ⏭ button to skip ahead to the beginning of the next track. Press this button again for each additional track you want to skip.

2. Press ⏮ button to skip back to beginning of the current track. Press this button again for each additional track you want to skip

PROGRAMMING THE CD PLAYER

You can program up to 20 titles in arbitrary sequence. You can also program a title more than once.

1. Before programming always press STOP/FOLDER and then press PROGRAM BUTTON. “P01” and “PROG” will then flash on the display.

2. Use ⏮ or ⏭ to select a desired title.

3. Press “PROGRAM” once to store the title. The indicators “P02”and “PROG” are flashing on the display. Please select the next title.

4. You can press STOP/FOLDER BUTTON to select the MP3 disc ALBUM.

5. Repeat step 2 and 3 to program more titles.

6. Press PLAY/PAUSE to start playback of the programmed titles.

RADIO OPERATION

ANTENNAS-AM

This unit has a built-in ferrite rod antenna, which eliminates the need for an

external antenna, and provides adequate receipt in most areas. If reception is weak,

turn the unit to improve receipt.

ANTENNAS-FM

The telescopic antenna on the top of the unit is for FM reception only. If reception is weak, adjust the length and the angle of the antenna.

TO LISTEN TO A RADIO STATION

1. Set FUNCTION selector to FM/AM position.

2. Tune a desired station by tuning the TUNING KNOB.

3. Adjust VOLUME control to suit your personal listening preference.

4. To switch the radio off, set the FUNCTION SELECTOR to OFF position.

MAINTENANCE

Notes on CDs

1. Before playing, clean the CD with a cleaning cloth. Wipe the CD from the center out to the ends.

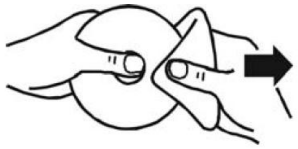

2. Do not use solvents such as benzine, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.

3. Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not expose to direct sunlight, nor leave CDs in a car, as there can be a considerable rise in temperature.

4. Do not stick paper or sticker on the CD. Do not scratch, dirt or fingerprints on the CD, for it may cause tracking error.

Cleaning the lens

If the lens becomes dirty, it may cause a skipping of sound during CD operation. Clean with a commercially available lens cleaner.

Cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzine.

TROUBLESHOOTING GUIDE

When the instructions in this manual are followed, this unit should function properly. However, if any of the following difficulties occur and cannot be corrected by the user or if a problem arises that is not mentioned here, please contact Customer Service or a qualified service technician.

1. Unit Does Not Play

• Unit may be disconnected from power source (No AC connection or batteries). Check connection.

• Disc is not correctly set. CDs should be inserted label side up.

• Disc is scratched or dirty. Please clean.

• The lens is dirty. Wipe clean gently with soft, dry cloth. Follow the instructions of the lens cleaner.

• There is moisture on the lens wait an hour and try again.

2. No Sound, Distorted Sound or Feedback

• Ensure plugs are inserted firmly.

• Wipe off plugs with clean cloth.

• Disc is scratched or dirty. Please clean.

• Volume control is turned down. Please increase.

3. Radio Reception is Unclear

• Radio station frequency may be weak. Adjust antenna.

4. Abnormal Function Operation

• Turn off the power, and turn on again.

• After using the unit with batteries (not included), you should remove them in order to power off the unit.

TECHNICAL SPECIFICATIONS

Power requirement: AC 230V ~ 50Hz ; 15 Watts

Dimension unit : 264 mm (W) x 174 mm (D) x 90mm (L)

RECEIVER SECTION

Receiving bands: AM/FM

FM Tuning range / Sensitivity: AM 540 -1600kHz

FM 88 - 108 MHz

*** Specifications and features are subject to change without prior notice.**

SAV
ADMEA / LOGISAV

ZI du clos des charmes

26 rue du clos des charmes

77090 COLLEGIEN - France